

Jünger Level Magic

FLUX:: Immersive

2026-02-13

Table of contents

1	Level Magic	5
2	General Settings	6
2.1	Bypass (1)	6
2.2	Plug-In Settings (2)	6
2.3	Current Selected Preset (3)	7
2.4	Loudness Mode (4)	7
2.5	Link Mode (5)	9
2.6	Recent Values (6)	10
2.7	Pause / Continue (7)	10
2.8	Reset (8)	10
2.9	Reset Max (9)	10
2.10	Input Gain Enable (10)	10
2.11	Input Gain (11)	11
2.12	Leveler Enable (12)	11
2.13	Leveler Processing Profile (13)	11
2.14	Leveler Loudness Target (14)	11
2.15	Leveler Operating Level (14)	12
2.16	Leveler Time (15)	12
2.17	Leveler Max Gain (16)	12
2.18	Leveler Freeze Level (17)	12
2.19	Transient Processor Response (18)	13
2.20	Transient Processor Max Gain (19)	13
2.21	Limiter Enable (20)	14
2.22	Limiter Processing Profile (21)	14
2.23	Limiter Max True Peak (22)	14
2.24	Expert Mode Enable (23)	14
2.25	Expert Mode AGC Recovery (24)	15
2.26	Expert Mode Clear History (25)	15
2.27	Expert Mode Initial Dynamic Gain (26)	15
2.28	Expert Mode Low Level Behaviour - Below Threshold (27)	16
2.29	Expert Mode Low Level Behaviour - Processing Threshold (28)	16
3	Preset Management	18
3.1	Save Preset (29)	18

3.2	Recall Preset (30)	18
3.3	Copy A / Copy B (31)	18
3.4	Loaded Preset Name (32)	19
3.5	Open Preset Manager (33)	19
3.6	Preset A/B Switch (34)	19
4	Preset Manager Window	20
4.1	Preset Protection	22
5	Specifications	23
6	Open Sound Control (OSC)	24
6.1	The OSC protocol	24
6.2	Using the Bonjour protocol, Zero Conf	24
6.3	Configuring OSC parameters manually	24
6.4	Feedback from the plug-in to the controller	25
6.5	Using multiple controllers and advanced configurations	26
6.6	Commands	26
6.6.1	How to use the commands	26
6.6.2	The LevelMagic(TM) OSC commands	26
6.6.3	Global Commands	27
	Appendices	28
A	Release Notes	28
A.1	Build 24.07.0.50393 - All plugins	28
A.1.1	New Features	28
A.1.2	Improvements	28
A.1.3	Bugs	28
A.1.4	Known Issues	28
A.2	Build 24.06.0.50386 - All plugins	29
A.2.1	Improvements	29
A.2.2	Bugs	29
A.2.3	Known Issues	30
A.3	Build 23.07.50310 - All plugins	31
A.3.1	New features	31
A.3.2	Bugs fixes	31
A.3.3	Known issues	32
A.4	Build 23.1.0.50251 - All plugins	32
A.4.1	New features	32
A.4.2	Bugs fixes	33
A.4.3	Known issues	34

A.5	Build 21.12.0.50123 - All plugins except TRAX and StudioSession	34
A.6	Build 21.11.0.50107 (HEar, IRCAM Verb)	35
A.7	FLUX:: Immersive - Plugins (including IRCAM Tools) 21.09	35
A.7.1	Build 21.9.0.50083	35
A.8	FLUX:: Immersive - Plugins (including IRCAM Tools) 20.12	36
A.8.1	Build 20.12.0.49880	36
A.9	Known Issues	37

1 Level Magic

[Product Page](#) | [Shop Page](#)



LevelMagic (TM) is a comprehensive Real Time and Offline loudness measurement, correction and management processor. Designed to meet the requirements of the global broadcast and media industry it is compliant with all current worldwide loudness standards. The algorithm is highly adaptive to the structure of the incoming audio and requires only a small number of parameters to be set by the user. The result is audio compliant with the selected standard, but free of any unwanted artefacts such as pumping, breathing or distortion.

Based on the ITU-R BS.1770(-1/2/3) standard, LevelMagic(TM) provides compatibility with EBU R128, ATSC A/85, ARIB TR-B32, FREE TV OP-59 and Portaria 354.

2 General Settings


2.1 Bypass (1)

When pressed, the inputs are routed directly to the outputs.

2.2 Plug-In Settings (2)

Pressing the cogwheels opens a settings window providing a range of general settings as well as a direct access button to the user manual.

- Input / Output: IO Config & Layout is not always available ... it is always displayed but can only be edited in some configuration and Format.

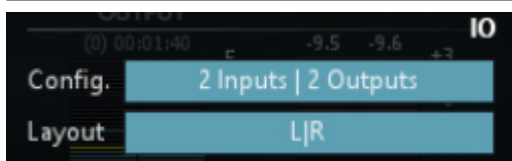


Stereo Configuration




Multichannel (5.1) Configuration

- Config: Current I/O configuration. Config is only available in certain VST hosts; typically hosts with limited capabilities for handling multichannel configurations.
- Layout: Available I/O routings based on current I/O configuration. Layout is available for editing if more than two input channels are available. If the Layout is changed from the default value, an asterisk * is displayed next to the Layout information in the Input section.

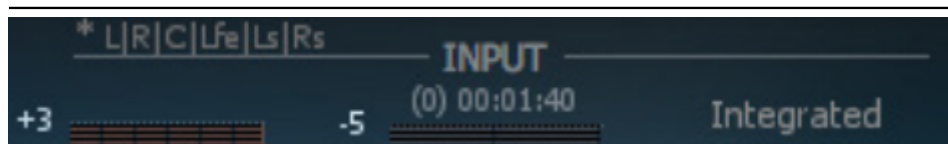

I/O Layout information

- User Interface - Maximum Meter(s) Refresh: Enables/Disables the max refresh rate of the plug-in's metering.
- Processing - Report Latency: Enables/Disables latency reporting to the host.
- Automation - Multi thread: Enables/Disables Multi-thread Automation, which is only available in VST. It forces the plugin to handle the parameters changes in a separate thread to avoid using the audio processing thread, if the host is doing this, which is typically the case in Nuendo and Cubase. If CPU spikes are experienced in the audio processing (DSP performance monitor) it may help to enable this feature. It is not available in AAX as Protools is already handling parameters changes in separate threads, as does AU plug-ins.
- OSC (Open Sound Control): Enables/Disables OSC control & mapping of the plug-in's parameters. More information on how to use and setup OSC can be found under "Open Sound Control" in this document.

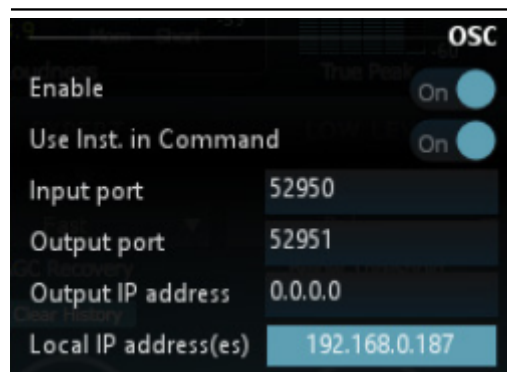

OSC Settings

- Version Information: Plug-in version and build number information.
- User Manual / Credits: Quick link to the User Manual. Plug-in creation credits.

2.3 Current Selected Preset (3)

Displays the current selected preset name. Clicking the arrow opens a new window accessing the built-in preset manager.

2.4 Loudness Mode (4)

- Level This is a Jünger Audio proprietary level based process with the purpose to maintain an anticipated operating level. The algorithm is intellectual property of Jünger Audio.

- ITU BS.1770-1 Loudness based measurement. Several filters and RMS weighting are used to get a loudness equivalent result. Starting from the well-known A, B, C weighting curves (DIN-IEC 651) the ITU did further research into the relationship of frequencies, their overall levels, their peak levels and the duration of signals, to develop the best representation of human loudness perception.
- ITU BS.1770-2 and ITU BS.1770-3 The ITU BS.1770-1 frequency weighted measurement has been extended by a gating function.

The EBU PLOUD-Group developed a gating function to exclude quiet sections from the measurement to prevent possible loudness under-read. An example is background noise, which does not contribute to the loudness perception as much as louder signals. This gating function consists of an absolute threshold at -70LUFS and a relative threshold 10LU below the absolute gated level.

This involves the necessity to recalculate the whole measurement with every subsequent block.

- EBU R128 This is a work-to-rule based on ITU BS.1770-3.

To characterize an audio signal the measurements of Program Loudness, Loudness Range and Maximum True Peak Level are used. The Program Loudness level is normalized to -23LUFS with a permitted deviation of +/- 1LU.

The measurement includes a gating method as specified in ITU BS.1770-2/-3 (EBU Tech Doc 3341). Loudness Range (LRA) measures the variation of loudness over the measurement interval. It is supplementary to the measurement of overall (integrated) loudness. Units are LU (EBU Tech Doc 3342). The maximum permitted True Peak Level of a program during production is -1dBTP.

Loudness Mode	Country	Corresponds To	Default Loudness Target	De Ma Pe
Level	JA proprietary	JA proprietary	-13dBFS	-1
ITU BS.1770-1	International	ITU BS.1770-1	-24LKFS	-2
ITU BS.1770-2	International	ITU BS.1770-2	-24LKFS	-2
ITU BS.1770-3	International	ITU BS.1770-3	-24LKFS	-2
EBU R128	Europe	EBU R128	-23LUFS	-1
ARIB TR-B32	Japan	ITU BS.1770-3	-24LKFS	-2
ATSC A/85 (2011)	USA	ITU BS.1770-1	-24LKFS	-2
ATSC A/85 (2013)	USA	ITU BS.1770-3	-24LKFS	-2
Free TV OP-59	Australia	ITU BS.1770-3	-24LKFS	-2
Portaria 354	Brazil	ITU BS.1770-3	-23LKFS	-2

- Summary, Available Modes

Warning

Important note: Systems working in ITU BS.1770-1 mode do not feature a gating function. Thus its output readings may vary from meters compliant to EBU R128 or ITU BS.1770-2/-3. Further keep in mind that the gate is only applicable to the integrated or program loudness measurement and not used for short-term or momentary measurements.

2.5 Link Mode (5)

The link function connects all the parameters of the processed channels and links the control circuits of the processing blocks in order to maintain the sound balance of these channels.

Two link options are available for stereo and surround processing:


- Stereo Mode: Linked/Unlinked
- Surround Mode (Only affecting the LFE channel): Linked/Unlink LFE



Stereo Mode - Unlinked

2.6 Recent Values (6)

When pressed, the results of the recent loudness measurement cycle, before Reset (8) was pressed, are displayed.

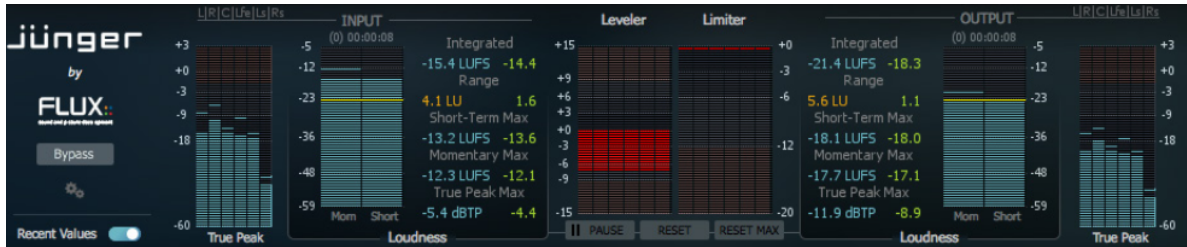

The recent values are the values displayed in Green to the right of the RT values.

2.7 Pause / Continue (7)

When pressed, the current loudness measurement cycle is paused/resumed.

The time markers under Input and Output displays the effective duration of the current measurement cycle; pause periods are not calculated into the effective duration.

2.8 Reset (8)

When pressed, a new loudness measurement cycle is started and the current one is ended. The current values are stored in Recent Values (6) right before Reset is pressed. Level Magic

2.9 Reset Max (9)

Resets only the 'max-parameters' (Short-Term Max, Momentary Max, True Peak Max) without ending the loudness measurement cycle. The measurement of the integrated loudness and the loudness range will not be affected.

2.10 Input Gain Enable (10)

When pressed, the main Input Gain is enabled.

Value Range: ON / OFF

2.11 Input Gain (11)

Adjusts the main Input Gain.

Value Range: -20 / +20 dBFS

2.12 Leveler Enable (12)

When pressed, the leveler processing is enabled.

Value Range: ON / OFF

2.13 Leveler Processing Profile (13)

The leveling process is designed to always deliver an as neutral and well sounding result as possible, and an option to further improve its neutrality is provided by selecting one of the five given presets to match the actual content of the processed audio signal.

Processing Profile Presets:

- Live Fastest response
- Speech Fast response
- Pop Medium response
- Uni Slow response
- Classic Slowest response

2.14 Leveler Loudness Target (14)

i Note

Please Note - This parameter is available in all modes except the Level mode.

The Loudness Target is the target level of the whole leveling process according to the ITU/EBU regulations.

ITU has defined the unit of measure to LKFS (Loudness, K-weighted, referenced to digital Full Scale, averaged out over the duration of the piece), and EBU has defined the unit of measure to LUFS (Loudness Units, relative to digital Full Scale). LKFS and LUFS are different unit names for the same measure, which are fully compatible.

Value Range: 0 / -50 LKFS/LUFS

2.15 Leveler Operating Level (14)

Please Note - This parameter is only available in the Level mode.

The signal is balanced around this operating level to achieve a consistent loudness impression for the listener. In order to preserve the natural dynamics of the program the balancing process does not, as far as it's possible, affect single peaks.

Value Range: 0 / -50 dBFS

2.16 Leveler Time (15)

The Leveler Time parameter controls the speed at which LevelMagic(TM) attempts to reach the loudness target. This setting should not be confused with the attack time of a conventional sound processor.

As the leveling process is a self-adjusting system the Leveler Time is not an absolute term but rather an initial value that could exceed the numerical value many times. When setting the Time it is necessary to take the overall function of the system into account. Production duties may require faster time settings, while ingest or play-out correction systems may require slower settings.

Value Range: 10 sec. / 2h

2.17 Leveler Max Gain (16)

The Leveler Max Gain parameter controls the maximum permitted gain change to reach the target level. Limiting the maximum amount of gain can be advantageous in order to minimize the risk of overly boosting noise and other unwanted signals.

The maximum attenuation is not affected by this setting. The system regulates the maximum attenuation adaptively to the signal structure.

Value Range: 0 / +40 dB

2.18 Leveler Freeze Level (17)

The Leveler Freeze Level function holds the amount of gain or attenuation if the signal level drops below this threshold.

It works in a similar way to a hold function in other sound processors.

i Note

Assuming the process applies a gain change of 10 dB to achieve target loudness, the input level will suddenly drop below freeze level. The gain change remains in its last state until the signal returns above Freeze Level. This behaviour is different to the Processing Threshold (28) where the gain change would return to its neutral state if the level falls below threshold.

It is necessary to always set Freeze Level above the Processing Threshold to prevent unwanted release behaviour.

Value Range: -20 / -60 dBFS

2.19 Transient Processor Response (18)

The response of the Transient Processor is a highly self-adjusting process reacting adaptively to the incoming signal structure.

The response can be adjusted in three presets from a more vital to a more relaxed setting but is also depending on the Limiter Processing setting. This means that the overall handling of transients and peaks is determined by the parameters of the Transient Processor and the Limiter.

Response Presets:

- Soft
- Mid
- Hard

2.20 Transient Processor Max Gain (19)

The Transient Processor can be limited to a maximum processing gain range. Sometimes a hard setting with a very limited gain range can sound more natural than a softer response at full gain range. Adjusting the Transient Processor according to the designated overall behaviour of the LevelMagic(TM) process will improve its neutral processing character.

Value Range: 0 / +15 dB Level Magic

2.21 Limiter Enable (20)

When pressed, the Limiter processing is enabled.

Value Range: ON / OFF

2.22 Limiter Processing Profile (21)

The limiting process is designed to always deliver an as neutral and well sounding result as possible, and an option to further improve its neutrality is provided by selecting one of the five given presets to match the actual content of the processed audio signal.

Processing Profile Presets:

- Live Fastest response
- Speech Fast response
- Pop Medium response
- Uni Slow response
- Classic Slowest response

i Note

Please note that the limiter setting will have an impact on the Transient Processor.

2.23 Limiter Max True Peak (22)

The Limiter Max True Peak sets the threshold for the system's true peak limiter. Its fast detection system with a 2ms lookahead time characterizes its response as a full brick wall limiter, not only for the obvious sample peaks but also for the hidden inter-sample peaks.

Value Range: -20 / 0 dBTP

2.24 Expert Mode Enable (23)

When pressed, the Expert Mode is enabled.

Initially LevelMagic(TM) runs as a 'set-up and forget' processor delivering supreme leveling results. To improve the result of the process even further, the option to adjust a range of 'internal' parameters is provided. Once these parameters are set they remain active even if the Expert Mode is disabled.

Value Range: ON / OFF

2.25 Expert Mode AGC Recovery (24)

All gain changes are processed adaptively to the incoming audio signal. Under normal conditions this adaptive reaction is completely sufficient. Though, in certain configurations it may be necessary to have a faster recovery or release time.

An example:

i Note

If LevelMagic(TM) is configured to work without gain or with just a very small amount of positive gain, then returning to unity from heavy attenuation can take quite some time. If a very loud part (above target) is followed by a quiet section (right at or below target), the recovery from damping will lead to an unnatural fade-in effect for the quiet section. In order to decrease this effect and accelerate the fade-in time, AGC Recovery can be set to [Fast] and will then be accelerated up to fifteen times its normal speed.

The result sounds almost similar to if an audio engineer rides the fader to correct unwanted level jumps and thus becomes very natural and well accepted by the listener. This setting is most helpful for setups where no positive gain (AGC amplification) is allowed. The effect works relative to the Leveler Time setting and hence is more obvious for short Leveler Time values.

Value Range: Normal / Fast

2.26 Expert Mode Clear History (25)

This is a triggered action that resets the dynamic processing without any release time. Imagine a short circuit to the timing circuits of an analog dynamic processor, which discharges the whole system and immediately returns the dynamic gain to its neutral state.

This function is useful to reset the process when switching programs (e.g. from movie to commercial breaks).

2.27 Expert Mode Initial Dynamic Gain (26)

This parameter directly depends on the Clear History trigger.

Instead of resetting the dynamic gain, it can be preloaded to a desired value the moment Clear History is triggered. The preload value is specified by the Initial Dynamic Gain parameter. This helps to reduce attack time artifacts if switching programs incorporates a known and undesired level jump. It is not necessary to exactly predict the level difference between the programs but already helpful to set up a few dB in the right direction.

i Note

The level jump from a movie to a commercial break is usually around 6dB. Resetting LevelMagic(TM) at the transition point helps to even-out the difference. Still, the process needs some attack time to build up a damping of 6dB, which can be audible depending on the program structure. If the gain is reset to a damping value between -4 to -6dB instead, the attack time is much shorter and artifacts will fall below the perception threshold. In many cases an Initial Dynamic Gain value of +/-3 dB is sufficient to create transitions with seamless loudness.

Value Range: -40 / +15 dB

2.28 Expert Mode Low Level Behaviour - Below Threshold (27)

The Low Level Behaviour parameters define what happens if the level drops below the Processing Threshold.

In continuous operation the Below Threshold mode should remain in [Release]. In this case the dynamic gain slowly returns to its neutral state in case of signal absence, and a returning signal would start a new processing period with its lead-in attack time. This may not be desired, especially in production applications where transport operations introduce unnatural gaps. In those cases setting the Below Threshold mode to [Hold] will pause the dynamic processing at the last value until the signal returns. Returning signals are treated just like continuous signals.

This function has some similarities to the Freeze Level but works with a different designation as it is meant to keep processing fluent over signal loss.

Value Range: Release / Hold

2.29 Expert Mode Low Level Behaviour - Processing Threshold (28)

This parameter sets the threshold for when to activate the processing.

Value Range: -20 / -80 dBFS
Default Value: -70 dBFS

3 Preset Management

LevelMagic provides two preset sections (32) referred to as section A and section B, offering simultaneous access to two full sets of parameter settings. Clicking the A section (bottom left) or the B section (bottom right), or clicking the arrow in the Current Selected Preset (3) display, opens a new window accessing the built-in preset manager.

3.1 Save Preset (29)

Save replaces the selected preset by a new one under the same name featuring the current settings. If you want to keep an existing preset without your new modifications, just select an empty place into the preset list, enter a new name for this modified preset featuring the current settings and press Save.

3.2 Recall Preset (30)

Once a preset is selected from the preset list in the preset manager window it must be explicitly loaded into one of the A or B sections by using the recall button.

Double clicking a preset in the preset list automatically recalls the preset to a slot and then the preset manager window will close. Opening the preset manager clicking the A section (bottom left), recalls the preset into the A section, opening it clicking the B section (bottom right), recalls the preset into the B section. Opening the preset manager clicking the arrow in the Current Selected Preset (3) display recalls the preset into the section currently selected by the Preset A/B Switch (34). Information about where the preset will be recalled is displayed to the right of the Preset Manager label (top left in the Preset Manager window).

A preset is effective only after it has been recalled.

3.3 Copy A / Copy B (31)

The current parameters of a section are copied to the other one. The section A or B is re-initialized with the current values and the Preset A/B Switch (34) is set to the corresponding section.

3.4 Loaded Preset Name (32)

Displays the current selected preset name.

Clicking the arrow opens a new window accessing the built-in preset manager.

3.5 Open Preset Manager (33)

Opens a new window accessing the built-in preset manager.


3.6 Preset A/B Switch (34)

Toggles between the full set of parameter settings from section A and B.

4 Preset Manager Window

The preset manager contains three preset banks:

- Factory bank - Contains factory presets. Saving presets in the Factory bank is not allowed, but any of the Factory presets can be recalled into a preset section and then saved into the User bank instead.
- User Bank - Contains user presets only.
- Global bank - Contains Global presets. A Global preset is a complete snapshot with all the settings from both of the preset sections as well as the position of the Preset A/B Switch (34).

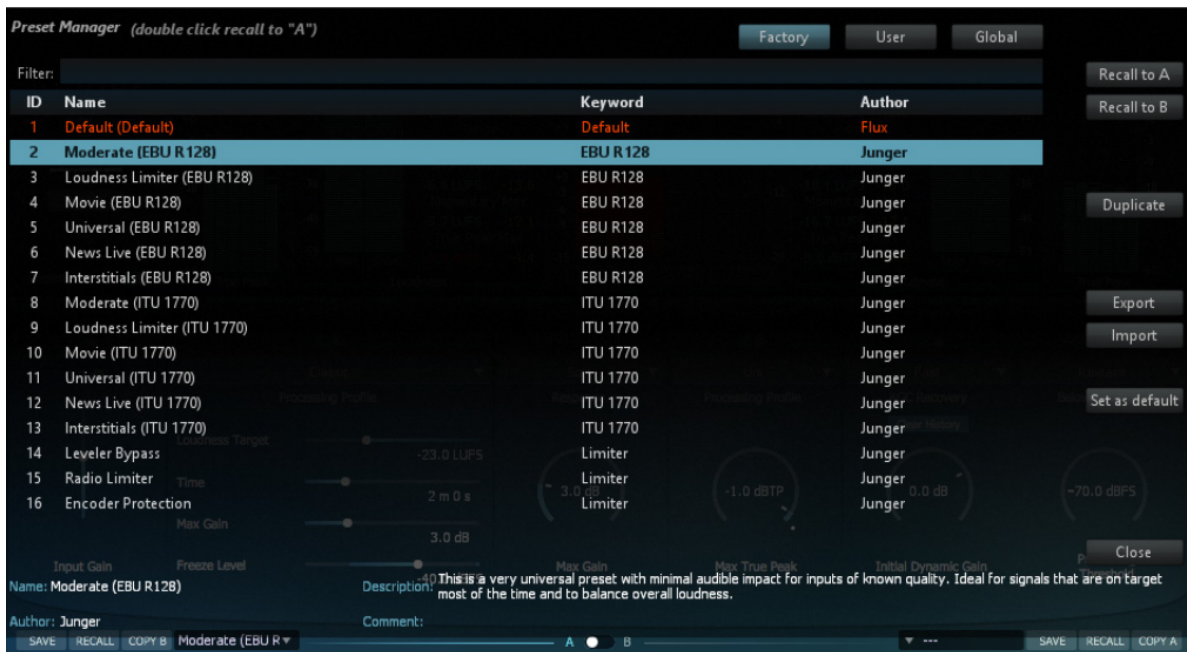

Preset Manager - Factory Bank



Preset Manager - User Bank

Additional controls in the preset manager window

Bank

Recall A Loads the selected preset into the corresponding slot.

Factory,
User,
Global

Recall B Loads the selected preset into the corresponding slot.

Factory,
User,
Global

Update Saves the current settings into the selected preset

User,
Global

New Saves the current settings into a new preset.

User,
Global

Duplicate Creates a copy of the selected preset and saves it to the preset bank.

Factory,
User,
Global

Edit Allows for editing of the preset meta properties.

User,
Global

Delete Removes the selected preset.

User,
Global

Export Creates a file with the content of the current preset bank.

Factory,
User,
Global

Additional controls in the preset manager window	Bank
Import Import the content of a preset bank file to the preset bank. - Add: Adds the content in the preset bank file to the preset bank. - Replace: Replaces the content in the preset bank with the content from the preset bank file. - Merge: Updates the preset in the bank if the preset in the file originates from it, else it's just added.	Factory, User, Global
Set as default Makes the currently selected preset the default preset	Factory, User, Global
Export default Exports only the default preset to a file. To import the default preset file for another user or machine, it has to be named DefaultPreset.xml and placed in: USERNAME/Documents/Flux/Nameoftheplugin/ and will then override the default preset if any.	Factory

4.1 Preset Protection

When saving or editing a preset an option to protect the preset is presented. The preset protection, if engaged, permits only the original preset author to disable the protection and edit the preset. This means that you can protect your presets in a multi-user configuration. Protected presets can only be modified using the session used for their creation. If used in another user session they can only be imported or deleted.

5 Specifications

Refer to this [website](#) for complete specifications.

6 Open Sound Control (OSC)

How to use the OSC protocol with LevelMagic(TM)

6.1 The OSC protocol

The OSC protocol is a way of controlling devices via the network. Here we present a way of taking control of the LevelMagic(TM) plug-in using this protocol.

6.2 Using the Bonjour protocol, Zero Conf

If your control device uses Bonjour or Zero conf protocol configuration will be quick and simple. Just select Flux::OSC in the ZeroConf device of your controller. Then, write the output port and IP address of your device in the labels of the plug-in. Remember that in the output port label of the plug-in you should write the input port of your controller and in the output address of the plug-in you should write the IP address of your device.

6.3 Configuring OSC parameters manually

The following parameters are used to configure OSC manually in LevelMagic(TM)

- Network configuration: OSC is a network based protocol so make sure that both your controller and the host are connected to the same network.
- OSC Enable: When turned on this parameter creates a thread for receiving and sending OSC messages. This thread is multi-instances. This means that this will control all the instances of the plug-in. For example, if you have four LevelMagic(TM) opened, all the communication and control via OSC will be done via this one configured thread. You just have to be sure that the following parameters are well configured.
- Input Port: This is the port where the plug-in will be receiving OSC messages (the output of your control surface)
- Output Port: This is the port where the plug-in will send feedback to (the input of your control surface).

- Output IP Address: This is the address of destination of the outgoing OSC packets of the plug-in. You should write here the IP address of your controller

The image below presents the different OSC parameters used for configuration.



6.4 Feedback from the plug-in to the controller

The Flux:: OSC manager will send feedback to your controller. These are the different situations when you will receive feedback:

- When a parameter begins to be edited
In this situation, the plug-in will send the following OSC messages:
 - Address Pattern: /NumberOfInstance/ControlBeginEdit
 - Argument: Name of the parameter.
 - Type: String
- When the edition of a parameter ends
 - Address Pattern: /NumberOfInstance/ControlEndEdit
 - Argument: Name Of the parameter
 - Type: String
- When a value is changed
When a parameter is changed in the plug-in by any mean (OSC, mouse, automation or other...) Flux :: Osc will send a message with the new value of the parameter and the instance number of the plug-in it belongs to.
 - Address Pattern: /NumberOfInstance/ParameterName
 - Argument: Float from 0 to 1, represents the value of the parameter.

- Type: Float
- When creating a new instance
 - When a new instance of a plug-in is created Flux:: OSC will send the following message:
 - Address Pattern: /NewInstanceRegisteredWithNumber
 - Argument: The number assigned to the new instance created.
 - Type: Float
- When an instance of a plug-in is destroyed
 - Address Pattern: /InstanceUnregisteredWithNumber
 - Argument: Represents the index of the instance that was destroyed.
 - Type: Float,

6.5 Using multiple controllers and advanced configurations

Flux :: OSC gives you the possibility to use multiple controllers for one instance of a plug-in and have a particular feedback for each one. If you want to use multiple controllers refer to the use of the /TalkToMeOnPort Command found under “Commands”.

6.6 Commands

6.6.1 How to use the commands

At first you have to know what an OSC message is composed of. Mainly, these two parts: The Address Pattern and the Argument.

For controlling parameters Flux:: only supports arguments of float type so make sure that the arguments you are sending via your controller are Floats. Float arguments must always be from 0 to 1 for controlling a parameter so you don't have to deal with scale conversion.

6.6.2 The LevelMagic(TM) OSC commands

When OSC is enabled in the Plug-in Settings (2) the file “OSC_Dict.xml” is automatically created in:

/Documents/Flux/LevelMagic

This is a properties dictionary with each parameter that can be controlled and mapped using OSC. The commands in the dictionary includes a ”Translation” attribute that can be used in order translate the OSC name into the Flux:: internal parameter name in both directions.

6.6.3 Global Commands

Global commands allow you to access to some additional information. These commands don't need an instance number. These are the available additional commands:

- Address Pattern: /GetDeviceInfo
- Type: Float
- Value: 1
- Explanation: Get all the names of the controllable parameters
- Address Pattern: /TalkToMeOnPort
- Type: Float
- Value: Port Number
- Explanation: This command is very strong. It will store the IP address and the port in argument as an endpoint. All the different messages will be sent to this endpoint. This command is very useful for using many controllers.
- Address Pattern: /GetCurrentValues
- Type: Float
- Value: 1
- Explanation: This command will send all the current values of the different instances of a plug-in. The structure of the sent OSC messages is the same as the one for controlling them.
- Address Pattern: /GetNumberOfInstances
- Type: Float
- Value: 1
- Explanation: This command returns the opened number of instances of a plug-in. If you have five LevelMagic(TM) opened this command will return 5.

A Release Notes

A.1 Build 24.07.0.50393 - All plugins

A.1.1 New Features

- VST3 automation state on UI

A.1.2 Improvements

- EVO EQ - Dark mode update

A.1.3 Bugs

- All plugins - VST3 - GUI freeze when reloading a session in Studio One
- All plugins - VST3 - Wrong parameters frequencies when reloading session at 44.1KHz
- All plugins - crash when loading a StudioOne session
- All plugins AAX - Crash protocols when using the protocols plugin preset manager on Windows
- EVO Channel/Touch and BS Pro - Presets have to be loaded twice to apply the filter values from the Touch section properly
- Elixir - Latency not properly compensated after changing stage parameters value in VST and AudioUnit
- Elixir - VST - May crash or bypass the audio when reloading a previous session in Nuendo
- Evo Channel - GUI issues on Geek panel
- Evo Channel/Evo EQ - Bad init on the lowpass filter cut off frequency
- HEar - Failed to load HRTF message in Logic until audio playback
- Verb and VerbSession - VST3 - Freeze during Steinberg TestHost on Windows

A.1.4 Known Issues

Important

- All plugins - AU - Crash in Logic 10.5 on MacOS Mojave

- All plugins - AU - Sidechain not available
- All plugins - VST versions - GUI issue in Izotope Ozone and Davinci Resolve
- Elixir - VST3 - Elixir is not available as 32 channels (24 max) in Reaper
- HEar - AU - Crashes Ableton
- HEar - Do not work properly with Ambisonic streams
- Trax - Ran out of CPU error and playback issue in Protools
- Verb - AAX - Moving any temporal parameter mute audio and generate noisy artefacts
- Verb - HOA 3rd order not working properly

Host Specific

- All plugins - VST2 - GUI cropped in TwistedWave
- All plugins - VST3 - Do not process the audio in TwistedWave
- EVO EQ - AAX-DSP - Not listed in DSP plugins list
- EVO Series - AAX DSP - No metering
- Evo Channel/Evo EQ - AudioUnit - LPF cut off frequency badly initialized when samplerate is 2FS or more
- StereoTool - AAX DSP - No metering

A.2 Build 24.06.0.50386 - All plugins

A.2.1 Improvements

- All plugins - Preset manager filter options updated
- All plugins - Preset recall button improved
- All plugins - Preset save button improved

A.2.2 Bugs

- AAX - Preset manager - Default preset is not applied to parameters at plugin instantiation
- All plugins - AAX bad GUI recall with user scale x2 and display scale x2
- All plugins - AU - auval real time safety checks
- All plugins - All parameters are reset when reloading a session when using presets
- All plugins - GUI issue on Windows
- All plugins - GUI issue with Retina in FLStudio
- All plugins - Mouse wheel not working anymore on knobs
- All plugins - Parameters are reset when deactivating/reactivating the plugin in Protools
- All plugins - Parameters are reset when loading a session if a preset is used
- All plugins - Preset manager font issues
- All plugins - VST3 - Keys not working in Pyramix

- All plugins - VST3 - Meters not working in Adobe premiere Pro, Adobe audition, Isotope RX10 and Waves Studio Rack
- All plugins - VST3 - preset name back reset to default when loading a session
- All plugins - VST3 - Can't edit values using keyboard on Windows
- All plugins - mouse wheel + shift key increase controls value when scroll down
- All plugins - AAX - Crash protocols when using the protocols plugin preset manager on Windows
- All plugins - VST3 - crash plugin scan when OSC enabled in prefs
- EVO Channel - Dark mode display issue when closing/opening the plugin
- EVO Channel - custom preset does not load some parameters
- EVO In - Phase shift amount automation line display issue in Logic
- EVO Series - Display issues on some parameters values
- EVO Series - Missing controls text
- EVO Series - Save button from preset manager not working
- EVO Series - save/recall/copy A & B preset buttons from main window not working
- EVO Series - wrong RMS reference value initialisation
- Elixir 1-Stage - GUI broken
- EvoEq - very low noise generated when offline rendering (32bit FP)
- HEar - AudioUnit - Crashes validation in Logic
- Preset Manager - Refresh missing - Preset name still displayed as current preset after being deleted.
- Solera - VST3 on Windows - DExp tab selected as default
- StereoTool - Correlation phase meter is wrong when quality setting set at 60fps
- StudioSession Plugins - May fail to scan in logic
- StudioSession Plugins - loads without the limitations
- Trax - VST3 - Learn feature not working
- VST3 - Some plugins are blacklisted in Cubase 13 on Windows
- VST3 - Conformity report
- VST3 - Display quality (15/30/60Hz) always reverts to initialized value
- VST3 - Verb & VerbSession - Crash in VST3 test host unit test
- VST3 - presets slots values are not correctly recalled when a session is saved after using morphing
- Verb - AAX - Matrix not reloaded on atmos 9.1.4 tracks
- Verb - Does not load the saved multichannel layout
- Verb - Multichannel layout not automatically set in Logic
- Verb - When in High Density, the dry signal is output
- Verb Session - AAX - GUI issue in HiDPI on Windows

A.2.3 Known Issues

Important

- All plugins - AU - Crash in Logic 10.5 on MacOS Mojave
- All plugins - VST2 - GUI cropped in TwistedWave
- All plugins - VST3 - Do not process the audio in TwistedWave
- All plugins VST versions- GUI issue in Izotope Ozone and Davinci Resolve
- Elixir - Latency not properly compensated after changing stage parameters value in VST and AudioUnit
- Elixir - Reaper - VST3 - Elixir is not available as 32 channels (24 max)
- Evo Channel/Evo EQ - All formats -Bad init on the lowpass filter cut off frequency
- HEar - AU - Crashes Ableton
- HEar - Do not work properly with Ambisonic streams
- HEar - Failed to load HRTF message in Logic until audio playback
- Trax - Ran out of CPU error and playback issue in Protools
- Verb - AAX - Moving any temporal parameter mute audio and generate noisy artefacts
- Verb - HOA 3rd order not working properly

A.3 Build 23.07.50310 - All plugins

A.3.1 New features

- Support Pro Tools new track formats

A.3.2 Bugs fixes

- All plugins - Nuendo - VST3 - crash when stereo plugins are instantiated on multichannel tracks (StereoTools, ...)
- All plugins - Pace protected plugins fail to scan on Da Vinci Resolve mac
- All plugins - Popups wrong metrics when changing screen
- All plugins - Presets not imported
- All plugins - VST3 - Nuendo - WIN (UHD360) - Wrong window size init
- All plugins - VST3 - WIN (UHD630) - REAPER - GUI refresh issue when in single window mode
- All plugins - GUI issue with AMD graphics on windows - flickering issue
- All plugins - AU - Plugins parameters are reset when bouncing in Reaper
- All plugins - VST2 - no multichannel with the plugins 23.X in Reaper
- All plugins - VST - Resizing the GUI does not update the floating window size in Nuendo on Windows with UHD630 graphics
- Bittersweet - VST3 - crashes on Pyramix on instantiation
- StereoTool / EVO Channel - VST3 - No goniometer / analyzer in Wavelab
- Elixir - Not available as 32 channels in Reaper
- EVO series - AAX - Dark Mode wrong GUI init

- EVO series - remove unused and duplicated presets
- EVO Channel - VST3 - spectrum smoothing slider crashes Studio one
- EVO Channel / EVO Eq - VST3 - Analyzer not working in Ableton Live
- EVO Channel / EVO Eq - scale eq control always reload on auto mode
- EVO Eq - weird release on meter
- EVO In - GUI refresh issue when toggling night/day mode
- EVO Touch - Zero Crossing Threshold label missing in the geek panel
- EVO Touch - frequency band selector does not always recall the good settings on session reload
- EVO Touch/ EVO Channel - Frequency range slider is hard to handle
- Pure Serie - VST3 - Attack value max 80ms
- Pure Comp - Crash when loading “Bass guitar” preset
- Pure Limiter - VST3 - advanced mode does not turn on advanced settings
- StereoTool - VST3 - vector scope not working in Ableton Live on Windows
- StereoTool - Not working in Final Cut Pro
- TRAX - Crash using oversampling with sessions set at 2FS or higher
- TRAX Tr - not usable in Protools anymore (build 50123)

A.3.3 Known issues

- All plugins - VST - GUI issue in Izotope Ozone and RX
- All plugins - AAX - Preset manager - Default preset is not applied to parameters at plugin instantiation
- Elixir - Latency not properly compensated after changing stage parameters value in VST and AudioUnit
- TRAX tr - Learn function returning wrong values
- VerbV3 - HOA 3rd order not working properly

A.4 Build 23.1.0.50251 - All plugins

A.4.1 New features

- New plugins Evo Compressor, Evo Touch and Evo EQ.
- VST3 support
- ARM support for AAX, AU and VST3
- Plugins are now resizable
- Elixir now supports 32 channels
- Alchemist, BitterSweet, Epure, Pure Compressor, Pure DCompressor, Pure Expander, Pure DExpander, PureLimiter, Solera, Syrah now support 16 channels

A.4.2 Bugs fixes

- All plugins - Preset Manager - Update user preset do not work
- All plugins - Preset manager - Crash or freeze when saving a preset
- All plugins - UI may be black on Intel UHD 630 graphical cards
- All plugins - AU/VST3 - Preset manager - Default preset is not applied to parameters at plugin instantiation
- All plugins - AAX - Crash with OSC when changing fx slot in Pro Tools
- All plugins - AU - Logic Pro - Automation of boolean/integer parameters broken
- All plugins - AU - Plugins crash in Da Vinci Resolve
- All plugins - DaVinci Resolve - VST - UI is truncated
- All plugins - Streamlabs - Plugins do not work
- All plugins - Licensing issue in DaVinci Resolve and GarageBand
- Alchemist - The range parameter works only for the 1st band
- BitterSweet - Not possible to tweak the Output gain after unlinking it
- BitterSweet - Output gain not reloaded properly when the link is disabled
- BSPro - some modes are not accessible due to GUI issue
- Epure - macOS - Bad graphic scale initialization at 2&4FS
- Evo Channel - Meter reference is not saved
- Syrah - Crash when selecting preset “Static fast compression”
- TRAX Tr - When the link is activated, the Formant slider does not have the expected audio effect
- TRAX Tr - ProTools - Issue in AudioStudio when the modulation is enabled
- VerbSession/VerbSession Studio Session and BSPro StudioSession - Pyramix - VST crash when instantiated
- Verb/Verb Studio Session - Crash when reloading session having 2 instances

A.4.3 Known issues

- All plugins - VST - GUI issue in Izotope Ozone and RX
- All plugins - AAX - Preset manager - Default preset is not applied to parameters at plugin instantiation
- Elixir - Latency not properly compensated after changing stage parameters value in VST and AudioUnit
- TRAX tr - Learn function returning wrong values
- VerbV3 - HOA 3rd order not working properly

A.5 Build 21.12.0.50123 - All plugins except TRAX and StudioSession

Bug fixes

- All plugins AudioUnit - GUI issue with Hdpi displays on macOS Monterey
- All plugins VST - Plugin scan freeze in Wavelab 11 on Mac M1 machines
- All plugins VST - Crash in Adobe Audition on macOS
- All plugins VST macOS - Fix crashes with Ableton live
- Elixir - Automation is not read for toggle parameters.
- Elixir - Crash when clicking on the settings button on Session version
- Elixir - Several fixes on the UI
- Elixir - Windows AAX - Refresh issue with two instances in ProTools
- HEar - Bypass is working in AAX
- HEar AAX - Crash when doing offline bounce on macOS
- HEar AAX - Crash when editing the matrix on macOS
- HEar AAX - Stereo - Change on Matrix are not applied until we change the preset
- HEar AudioUnit - Ableton crashes when inserting a second instance

A.6 Build 21.11.0.50107 (HEar, IRCAM Verb)

NOTE: CURRENTLY NOT COMPLIANT WITH ABLETON LIVE MACOS

Improvement

- HEar - 5.1.4 & 5.0.4 now available

Bug fixes

- HEar - Fix meters refresh issue
- HEar - No verb on some presets
- HEar - Protools crashes when doing offline bounce on macOS

A.7 FLUX:: Immersive - Plugins (including IRCAM Tools) 21.09

This release includes updates for all FLUX::Immersive plugin processing products with the exception of EVO Channel, Epure, IRCAM Trax, Studio Session.

NOTE: CURRENTLY NOT COMPLIANT WITH ABLETON LIVE MACOS

Major optimizations

- Apple computers Big Sur (new M1 chips) AU validation
- Important updates to the Ircam Verb + Session
- Overall better handling of multichannel track setups such for Atmos. (Ircam Hear, Verb and more)
- Automatic detection of track format / channel order for DAWs when possible.

A.7.1 Build 21.9.0.50083

Bug fixes

- Apple computers Big Sur (new M1 chips) AU validation failing
- Empty GUI when close/reopen plugin - Windows 10 - UHD630 graphics
- AudioUnit in Reaper - do not process audio when offline bounce
- Default preset not loaded correctly on instantiation of Verb + Verb Session
- Evo.Channel on Retina - Input and Output Sliders badly scaled
- Incompatible AudioUnit issue in Apple Final Cut Pro
- Plugins: Recall Preset Flags (e.g. “All but setup”) recall always everything
- Preset Manager - UI issue with small plugins when a preset has been created
- Ircam Verb Session reload in VST with audio interruption

- VST Plugins Session not correctly reloaded if it integrate an IO configuration change
- Verb session - Dry/wet not applied in offline render
- Verb v3 Atmos crash on AAX
- Verb: AU validation failed on Apple M1
- Verb: LFE not disabled by default on ProTools
- Verb: Recall Preset may be not correct with double click inside the preset manager
- Verb: disabled channel is not re-injected according to dry/wet parameter (100 % wet means muted)
- Verb: init issue with Nuendo
- AAX - Some plugins - Crash on Mac / No GUI on Windows
- Overall reliability / stability fixes.
- Plugin size not correct
- Potential plugins crash when opening UI

A.8 FLUX:: Immersive - Plugins (including IRCAM Tools) 20.12

This major release includes updates for all **FLUX::Immersive** products with the exception of IRCAM Spat V3 legacy product. Please refer to Spat V3 - Spat Revolution crossgrade options.

Major optimizations

- HiDPI / Retina support + display enhancements and fixes
- Page Table unification for **Avid Control**, S1, S3, S4, S6 and S6L.
- OSC Control for plugins.
- **IRCAM Verb** support for Dolby Atmos, Multichannel support up to 16 channels
- **IRCAM Hear** - Multichannel stability improvement, Now up to 10 channels. (Dolby Atmos 7.1.2)
- **IRCAM Tools** - Audio I/O Matrix and Multichannel enhancement
- Most plugins support of 8 channel.
- 16 channel support for **Bittersweet Pro**, **Evo In** and **Evo Channel**

A.8.1 Build 20.12.0.49880

Bug fixes

Core:

- BPro - Latency report issue (AAX)
- IRCAM TRAX Tr - Latency report issue
- IRCAM Verb - Wrong initialization value for Reverb density
- IRCAM Verb -Dry signal still goes out in disabled channels when wet is 100%

- All Pure Dynamics PI + Alchemist - Wrong Thresholds initialization values
- AAX “monolithic” are broken like Hear, TRAX etc...
- Almost all AAX plugins don’t reload parameters from 47856 version session.
- Pure Limiter - Diff feature bypassed the input gain.
- Pure Limiter - Inverted sidechain filters.
- Any plugin except Evo Channel - Research Presets resets when click on a preset.
- Evo channel - Wrong values when reloading touch section.

UI:

- Current preset name disappear on re-opening GUI or session

A.9 Known Issues

- Wavelab “Sample rate not supported” when a plugin is inserted on a clip, track or output section.
- TRAX Tr - Learn frequencies display wrong values (AAX only).
- Hear - Internal config labels change when modify LFE input config from routing matrix.
- When using OSC on a plugin in Pro Tools, a chrash will occur if you change/move FX insert slots